 
 
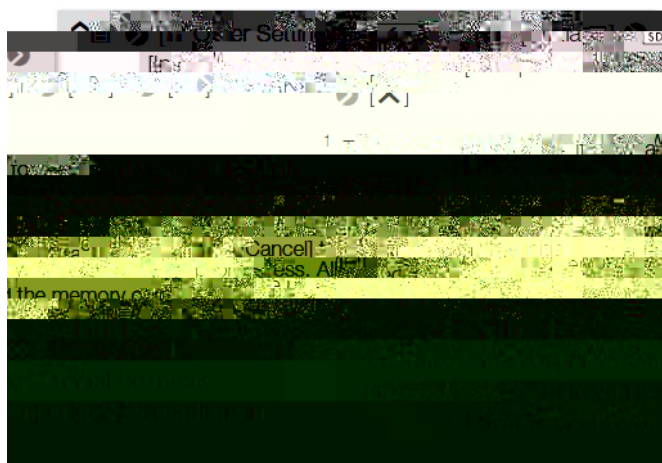 
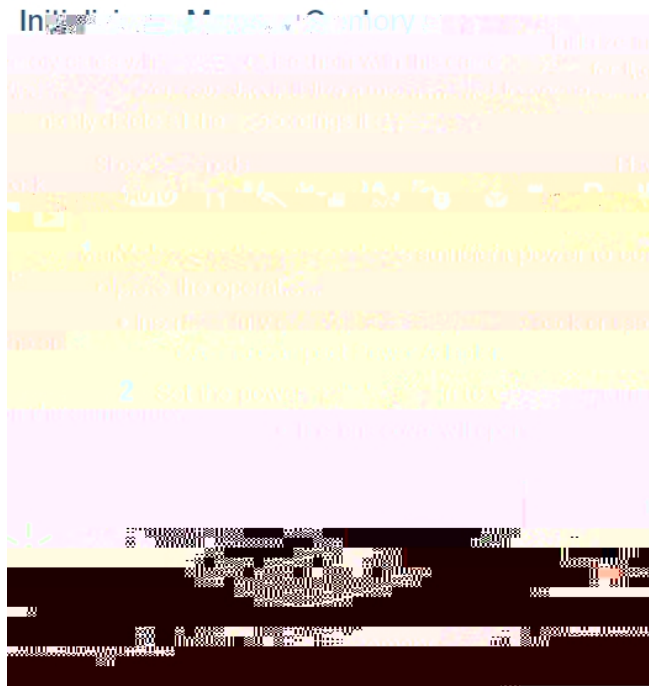 


- Camera should contain a CD containing the instruction manual and ImageBrowser EX software.
- Battery: charging takes 90 minutes (page 237). Battery life 70 minutes.
- Records onto a Micro SD card (SanDisk, Toshiba, or Panasonic recommended)
 - o SanDisk 8GB Class 10 ~\$12.00
 - o You must initialize card before first use.

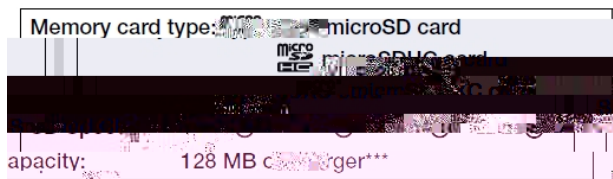 


- Recording – recommended to use 4 Mbps for smallest possible file size


Approximate recording times

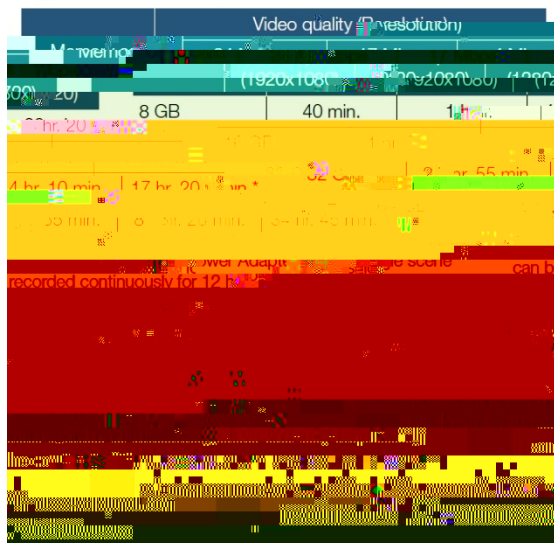



- o Recommended - Camera will default to ultra-wide field of view (page 57).

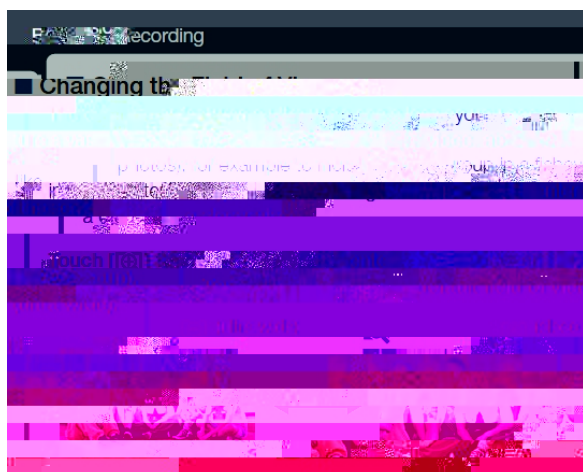


 
- o Recommended – use Noise Suppression Audio Scene (page 110).

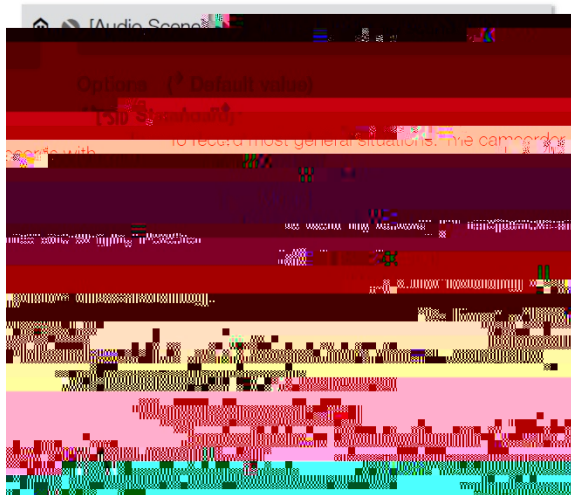

  - Editing: you can “trim” scenes directly on camera (page 79).

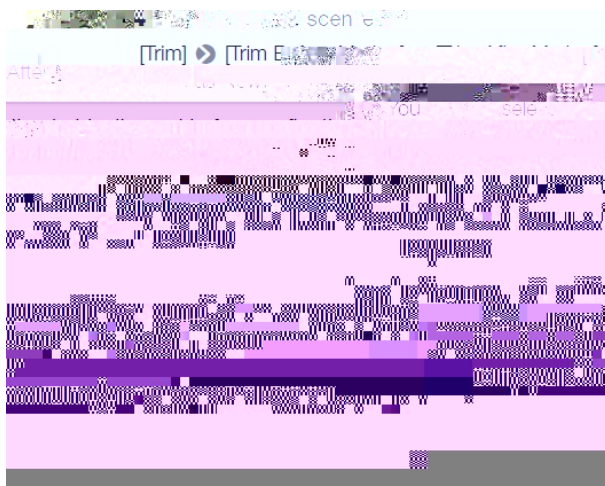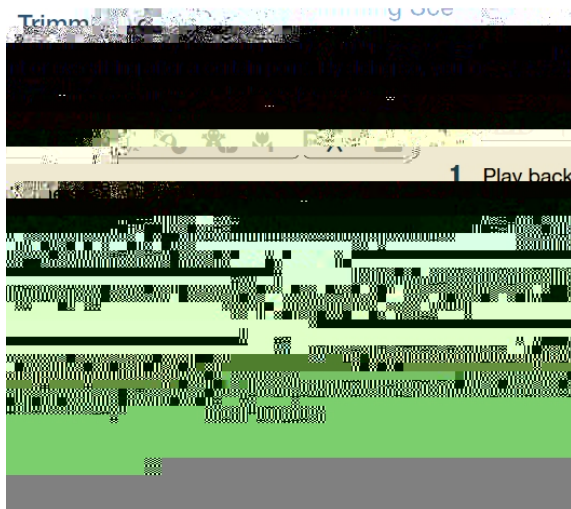

  - You can convert and resize movies to obtain smaller file sizes (page 128).

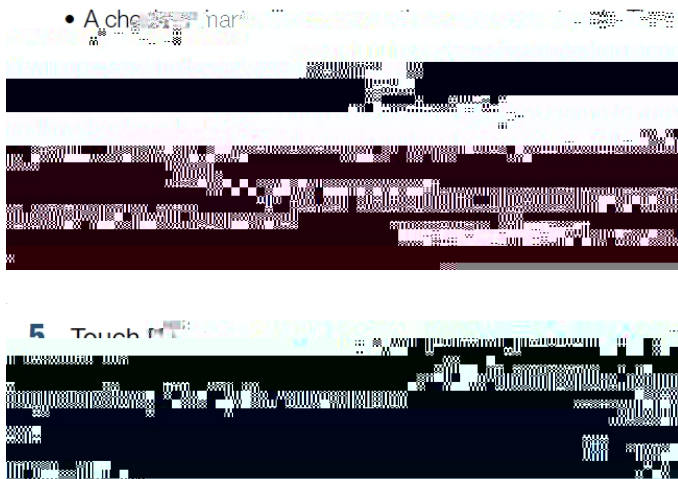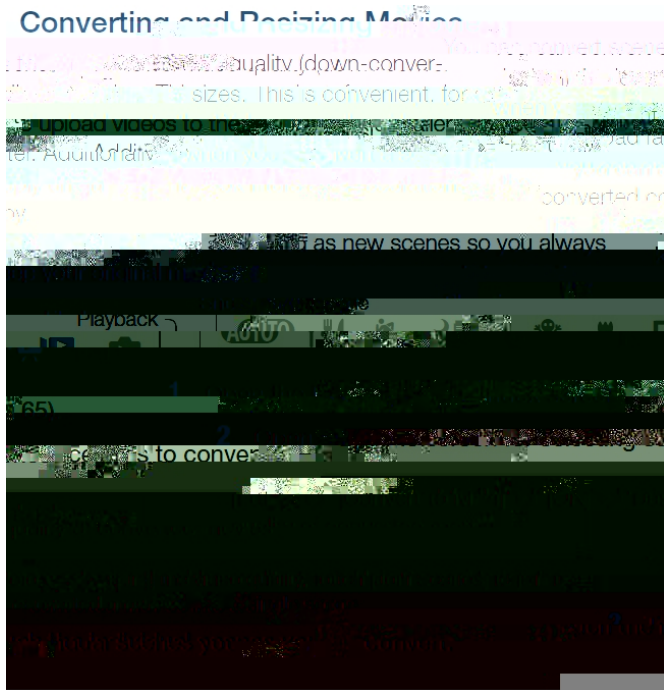

- Saving recordings on a computer.
 - o Make sure to save your recordings on a computer on a regular basis.
 - f Connecting the camcorder to a computer (pg 134-136).
 - ImageBrowser EX software
 - o “Import Images from camera” and select your image(s).
 - o Videos can be found in a dated folder in the “Pictures Library”.\